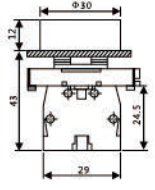 


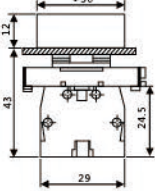 


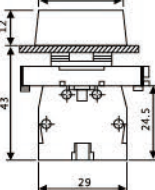 


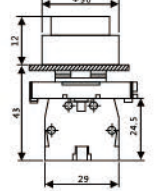 


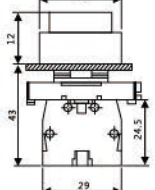 


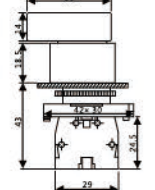 


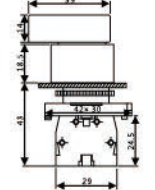 


	<p>Even button spring return</p> <p>LAYS-EA11(XB2-EA11) LAYS-EA21(XB2-EA21) LAYS-EA31(XB2-EA31) LAYS-EA42(XB2-EA42) LAYS-EA51(XB2-EA51) LAYS-EA61(XB2-EA61) LAYS-EA25(XB2-EA25) LAYS-EA35(XB2-EA35) LAYS-EA45(XB2-EA45)</p> <p>NO NO NO NC NO NO NO+NC NO+NC NO+NC</p>		
	<p>Even button spring return With symbol logo</p> <p>LAYS-EA3311(XB2-EA3311) LAYS-EA3361(XB2-EA3361) LAYS-EA3341(XB2-EA3341) LAYS-EA3351(XB2-EA3351) LAYS-EA4322(XB2-EA4322) LAYS-EA4342(XB2-EA4342) LAYS-EA5331(XB2-EA5331) LAYS-EA5321(XB2-EA5321)</p> <p>NO I NO II NO ⬆ NO ⬆ NC ⬆ NC ⬆ NC STOP NO START NO START</p>		
	<p>Button with protective cover</p> <p>LAYS-EP11(XB2-EP11) LAYS-EP21(XB2-EP21) LAYS-EP31(XB2-EP31) LAYS-EP42(XB2-EP42) LAYS-EP51(XB2-EP51) LAYS-EP61(XB2-EP61)</p> <p>NO NO NO IP 65 NC NC NO</p>		
	<p>Protruding button</p> <p>LAYS-EL21(XB2-EL21) LAYS-EL31(XB2-EL31) LAYS-EL42(XB2-EL42) LAYS-EL51(XB2-EL51) LAYS-EL61(XB2-EL61)</p> <p>NO NC NO NO NO</p>		
	<p>Protruding button spring return With symbol logo</p> <p>LAYS-EL3311(XB2-EL3311) LAYS-EL3361(XB2-EL3361) LAYS-EL3341(XB2-EL3341) LAYS-EL3341(XB2-EL3341) LAYS-EL4322(XB2-EL4322) LAYS-EL4342(XB2-EL4342)</p> <p>NO I NO II NO ⬆ NO ⬆ NC ⬆ NC STOP</p>		
	<p>Standard handle knob</p> <p>LAYS-ED21(XB2-ED21) LAYS-ED25(XB2-ED25) LAYS-ED33(XB2-ED33) LAYS-ED41(XB2-ED41) LAYS-ED45(XB2-ED45) LAYS-ED53(XB2-ED53)</p> <p>NO 2-position locked NO+NC 3-position locked NO+NO 2-position locked NO 2-position reset NO 2-position reset NO+NO 3-position reset</p>		
	<p>Long handle knob</p> <p>LAYS-EJ21(XB2-EJ21) LAYS-EJ25(XB2-EJ25) LAYS-EJ33(XB2-EJ33) LAYS-EJ41(XB2-EJ41) LAYS-EJ45(XB2-EJ45) LAYS-EJ53(XB2-EJ53)</p> <p>NO 2-position locked NO+NC 3-position locked NO+NO 2-position locked NO 2-position reset NO 2-position reset NO+NO 3-position reset</p>		
	<p>Key button</p> <p>LAYS-EG21(XB2-EG21) LAYS-EG25(XB2-EG25) LAYS-EG03(XB2-EG03) LAYS-EG33(XB2-EG33) LAYS-EG41(XB2-EG41) LAYS-EG45(XB2-EG45) LAYS-EG53(XB2-EG53)</p> <p>NO 2-position locked NO+NC 2-position locked NO+NO 3-position locked NO+NO 3-position locked NO+NC 2-position reset NO+NC 2-position reset NO+NO 3-position reset</p>	