 


ACCESSORIES

S RELAYS SOCKET

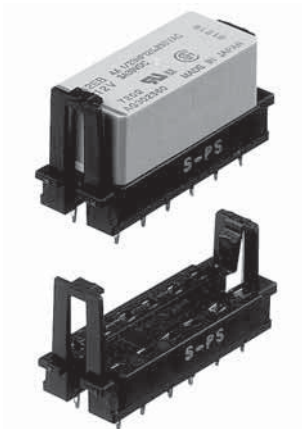

 
DIMENSIONS (mm inch)

The CAD data of the products with a **CAD Data** mark can be downloaded from: <http://panasonic-electric-works.net/ac>

CAD Data

External dimensions

PC board pattern (Copper-side view)

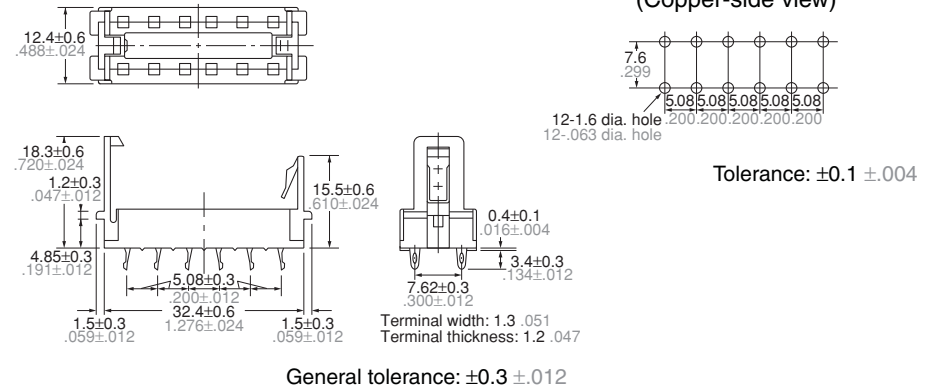

Compliance with RoHS Directive

TYPES

| Product name | Part No. |
|-----------------|----------|
| S Relays Socket | S-PS |


SPECIFICATIONS

| | |
|----------------------------|---|
| Maximum continuous current | 4 A |
| Breakdown voltage | 1,500 Vrms between terminals |
| Insulation resistance | More than 100 MΩ between terminals at 500 V DC Mega |
| Heat resistance | 150 ±3°C (302 ±5.4°F) for 1 hour. |

NOTES


Inserting and removing method

 Inserting method: Insert the relay as shown in Fig. 1 until the rib of the relay snaps into the clip of the socket.



Removing method:

 (1) Remove the relay straight from the socket holding the shaded portion of the relay as shown in Fig. 2.



(2) When sockets are mounted in close proximity, use a slotted screw driver as shown in Fig. 3.

